iVIEW-710TPC

USER´S MANUAL

7" CyPad Tablet PC

To assure the product to work in best status
please read the users manual carefully before operation and keep it well for future use

Content

I. **Maintenance and Safety Information** 2
1.1 Maintenance 2
1.2 Safety tips 2
II. **Cypad Brief Description** 3
2.1 Cypad graph 4
2.2 Battery charging 4
2.3 Cypad status and information 4
III. **Quick Start** 5
3.1 Button function 5
3.2 Boot and shutdown 5
3.3 Screen of opening and closing 5
3.4 The use of touch screen 6
3.5 Page interface 6
3.6 Access to the application 7
3.7 USB connection 7
3.8 Storage card 8
3.9 Input text 9
3.10 User skills 10
IV. **Establish Connection** 10
4.1 WIFI connection 10
V. **Communication** 11
5.1 E-MAIL 11
VI. **Multimedia** 12
6.1 Support the file format 12
6.2 Music 12
6.3 Video 13
6.4 HDMI 13
6.5 Gallery 13
VII. **Internet** 14
7.1 Browser 14
IIX. **Other Applications** 16
8.1 Alarm clock 16
8.2 Calculator 16
8.3 File Manager 17
IX. **Basic Setup** 18
9.1 Sound and Display 18
9.2 Location and Security 18
9.3 Micro SD Card and Storage 19
9.4 Date and time 19
9.5 Set the language 19
9.6 About device 19
X. **King Kong Market** 20
XI. **System Upgrade** 21
XII. **Troubleshooting** 21
XIII. **Specifications** 22

Thank you for purchasing iView products, for technical support or more information please visit us on **WWW.IVIEWUS.COM** or CALL US at **(909) 627-9888**

IVIEW's new 7-inch CyPad 710TPC Tablet PC is the next generation of mobile iinternet device, providing access to the web, customization through Android Apps, and viewing of multimedia content. Embedded with King Kong Apps Market with thousands of useful and fun apps you can easily access and download the apps that tap your need. You can access the information you need, such as news, weather, or local business info, enjoy your favorite movie clips or watch some YouTube videos, or just kick back and listen to some music, work on the get-go, with Office productivity software. It comes with a stylus for your convenience to operate the application. You can add web function to your big screen TV by connecting via HDMI output. With built-in memory of 4GB, you may store plenty of pictures, movies, and documents. Expansion storage is available via Micro SD slot, up to 16GB. iView-710TPC is your all-in-one tablet that you can't live without.

I. Maintenance and Safety Information

1.1 Maintenance

- Keep Cycad dry. Do not expose the equipment, battery charger to water, vapour or using wet hand to operate equipment or charger. In case any short-circuit, corrosion caused by equipment failure, and other reasons.
- Don’t impact or vibrate the unit, battery and charger strongly. Lest cause equipment, battery and charger went wrong, burnt or exploded.
- Don’t put this equipment, battery and charger in the too high or too low temperature region. Otherwise may cause equipment, battery and charger went wrong, burnt or exploded.
- Do not hit, throw, acupuncture the Cypad, and avoid dropping, extruding, bending Cypad.
- Do not apply the Cypad with unauthorized accessories，otherwise the equipment and accessories will not under company’s warranty scope.

1.2 Safety Tips

Before you use the Cypad, please read this section information. And let your child know these information. For detailed information, please refer to the safety guidelines and note.

- Do not use Cypad while driving. It may cause dangerous driving.
- In medical sites, please comply with relevant provisions or regulations. Turn off Cypad near medical equipment area.
- Turn off Cypad or switch to “Plane Mode” when you are boarding to avoid wireless signals jamming aircraft control signal.
- Turn off Cypad when near the use of high precision electronic equipment or it might lead to electronic equipment being disabled.
- Do not remove or repair Cypad and accessories without the authorization of qualified personnel from the manufacturer.
- Put Cypad away from magnetic equipment. There may be interference from magnetic equipments on the Cypad causing damage to its storage device.
- Don’t use Cypad under high temperature and flammable areas (such as near gas station).
- Don’t leave Cypad and accessories in places where children can reach it. Do not let the child use Cypad unsupervised.
- Please abide by the relevant laws and regulations when using the Cypad, and respect others lawful rights and privacy.
- Strictly abide by relevant instruction of this manual when using USB cable or it might damage your Cypad or personal computer.
- Don`t use Cypad in the damp environment such as bathroom etc. Avoid CyPad from being soaked or flushed by liquid.

II. Cypad Brief Description

2.1 Cypad Graph

Cypad Front Picture:

Cypad Lateral Graph

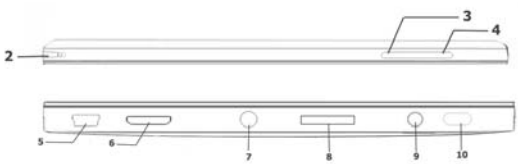

Cypad Bottom graph：

1	Menu Button	2	Touch Pen
3	Home	4	Menu
5	Mini USB	6	HDMI
7	Earphone jack	8	MS Card
9	Power jack	10	Turn on/off button
11	Reset	12	Speaker

2.2 Cypad Accessories

- Cypad Tablet PC
- Power Adapter
- OTG Cable
- USB Cable
- Earphone
- User Manual
- Leather Case
- Touch Pen

2.3 Battery Charging

When firstly use the Cypad, make sure to charge the battery.

1. Use the AC adapter to charge the Cypad.
2. Check the power indicator. Red light indicates recharging, the green light means full.

2.4 Cypad Status and Information

Notice Icon

Please click column frame and slide the screen by touch pen to open notice list when the message shows notice on the screen. Check detailed information. Later you can click information box and slide to shut down information window. The icon illustration for information bars are as following:

	New email		Mute
	New voice mail		Uploading/downloading
	Alarm opening		Download completed
	Music playing		3G service is connecting, the data is exchanging.
	Data synchronization		No SD card
	Insufficient SD card space		More
	WIFI service already connected, network available		Battery Charge Level
	Flight mode		Charging
	General notice (such as: synchronization error)		Use USB line to connect computer with Cypad

III. Quick Start

3.1 Button function

Key functions illustration:

Power key	● Long press for booting ● In booting condition, long press to pop-up shutdown options. ● In booting condition, press to power off the device
Menu button	● Press to open the interface menu
Back/ OK button	Press to goto previous operation procedure or interface.
Home key	● Press to return to the function interface from arbitrary interface. ● Long press to open recent application window.
Direction key (Home/ Menu Key	● Use direction key to choose applications by moving focus. ● Move focus to select links from the web when you browsing.

3.2 Boot and shutdown

Boot

Long press on the power button for 2 seconds and it will boot the Cypad.

Shutdown

1. Long press on the power button, then "shutdown" option will pop up.
2. Click the shutdown to power off.

3.3 Screen of opening and closing

After idling period of time, screen will be in time out automatically to save the battery.

3.3.1. In the screen opening condition, press the power button, the screen can be immediately locked.

3.3.2. In timeout condition, you can long press boot key to open screen. Enter locked condition after opening it, press "lock " icon and slide up for unlocking, and holding up " voice " icon and slide down for mute condition with finger or touch pen.

3.4 The use of touch screen

There are several ways you can browse screen, menu and application, etc.

Click: Click to choose any application on homepage
Press: Press to open available options (such as the text box or web link) or move shortcut and main program menu on the homepage
Fast sliding or sliding: Slide to make rapid vertical or horizontal drag action
Drag: Drag to reach target position
Rotating: Rotate to convert lateral direction to straight.

3.5 Page interface

The homepage will show all applications. You can use the application shortcut to customize your homepage wallpaper, etc.

Tip: In any application, homepage key can be pressed to go back to the home page.

3.5.1 Customize homepage interface

New homepage project

1. Press on the popup menu for 2 seconds in the blank area of the interface on the homepage.
2. On the popup menu, select wanted project to add to a new homepage interface.

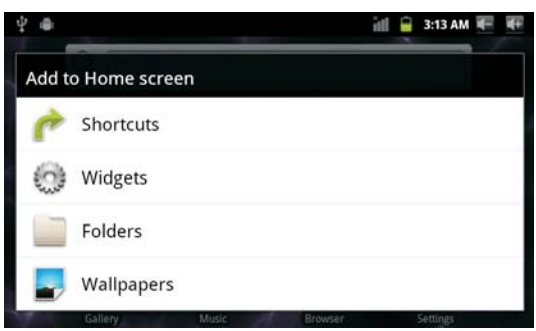

Change desktop wallpaper

1. On the popup menu, click the wallpaper.
2. Click the Gallery or Live Wallpapers to change the desktop wallpaper.

Establish folder

1. Click the folder, and new folder.
2. Click new folder on homepage interface to open it.
3. Click and hold the folder list of headlines to rename it, press back key to confirm.
4. Holding the application and drag it to folder, then the application can be found in the folder.
5. For deleting files inside the folder, long press the target application.
6. For deleting the whole folders, drag the folder to the right side, then the throw it into the garbage can.

3.6 Access to the application

1. Please click program volume label.

2. Choose to visit the application.
3. If you want to quit program, press the return key or press homepage key to return home interface.

3.7 USB connection

The storage setup of Cypad

Before transporting documents, you must set storage mode for the Cypad.

1. Use USB cable to connect Cypad with computer. Notice bar will show the notice cue.
2. Drag the notice cue to open notify panel.
3. In the notification panel, click on the USB connection, then click loading.
4. Then the USB connection succeeds.

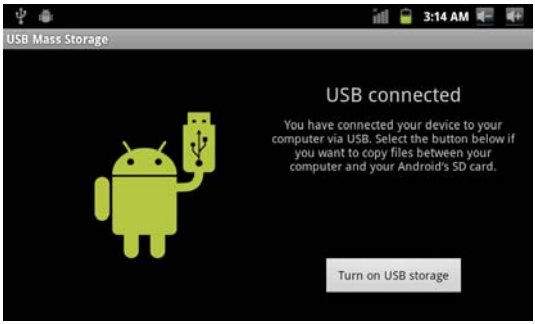
3:14 AM
USB Mass Storage
USB connected
You have connected your device to your computer via USB. Select the button below if you want to copy files between your computer and your Android's SD card.
Turn on USB storage

3:14 AM
USB Mass Storage
USB connected
Turn on USB storage
If you turn on USB storage, some applications you are using will stop and may be unavailable until you turn off USB storage.
OK
Cancel
Turn on USB storage

Copy files to memory cards

1. Use a USB cable to connect Cypad with computer.
2. After setting the storage, then the Cypad is connected with computer.
3. Open My Computer, and then see "portable disk (x)" content.
4. Find intended copy files to duplicate to the "portable disk (x)".
5. After the completion of the copy, click on "safe deletion hardware" of your computer task bar to unload.

3.8 Storage card

Copy files to storage card

You can transfer files between Cypad and computer such as music and pictures, etc. If you want to see the file, click file browser, then you can browse the contents of the SD card.

Delete the file from the Cypad storage card.

1. Find the file you want to delete.
2. Hold the file which you need to delete, then it will popup the file menu.
3. Click "delete".

Remove memory card in the Cypad opening condition.

If you need to remove memory card in the Cypad opening condition, you must firstly unload memory

card or memory card will be damaged.

1. In the homepage interface, press the menu button and then click Settigs.
2. Drag down setting menu, and then click the SD card and equipment memory.
3. Click the "Unload SD card"

3.9 Input text

Use the screen keyboard

When you start programs or select text edit box which need to input text or number, it will appear screen keyboard.

The keyboard input method is: **Android keyboard**

Per preinstall, Cypad will display Android keyboard when you want to input word.

1. On the homepage interface, press menu button and then click "Settings".
2. Click the language and keyboard.
3. List all installed input method of Cypad in the text setup area.
4. Tick after the input method which you want.

Use and switch input method

1. On the text input interface, hold text edit box area until it popups "edit text menu ". Then click the input method.
2. Select the input method which you want to use, then select Android keyboard panel.

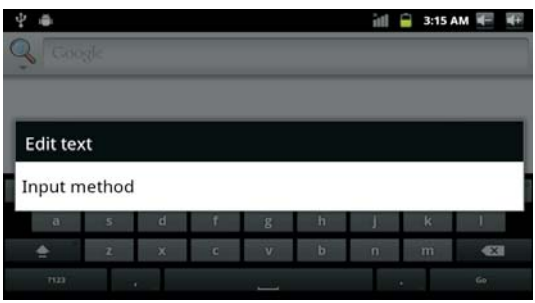

1	Click for case-sensitive inputs
2	Switch from text input mode to digital number input mode
3	Click "Space" key to input space
4	Click "Go" key for "enter" function
5	Delete the characters of the left cursor. Click and hold will delete all the characters of the left cursor.

3.10 User skills

Open recently used applications

In any programming interface you can hold homepage keys, the screen will popup program window, window displays recently used application.

Add small tools on the table

In the homepage interface, hold the blank area and a “Add to Home Screen” menu will pop uo. Select “Shortcuts” icon and click to go into the next Menu where it says “Select Shortcut” Menu will list applications, such as music, picture frame, clock, search, etc for you to locate on your opening screen to directly access the apps.

Switch input method

Hold the English edit box of system, click the “Input Method” to choose input method such you english language input or chinese language input method.

Quick close of program

Press the return button to return to previous interface, or press homepage button to return to the homepage interface.

IV. Establish Connection

4.1 WIFI connection

You can connect Cypad to Wi-Fi network. The operation for connection as follows:

1. In the homepage interface, click the menu button, then settings menu will pop up.
2. Click settings.
3. Click wireless and network.
4. Click Wi – Fi
5. Click Wi - Fi Settings, Cypad will automatically scan available Wi - Fi wireless networks.
6. Choose the Wi - Fi network which you want to connect. Enter the password then click connect.

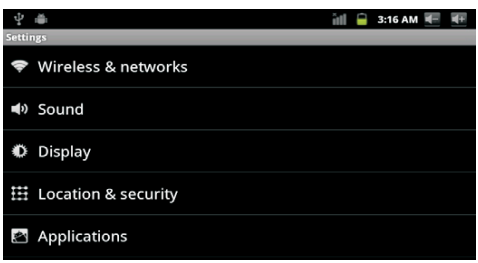

V. Communication

5.1 E-MAIL

5.1.1 E-mail Settings

E-mail applications accompany with email settings guide. Common Web email service providers (e.g. Gmail, Yahoo, Hotmail and 163 etc manufacturers) with set up of external POP3 or IMAP email account can have your emails directly downloaded to your POP mailbox.

Note: The mail setting must be processed under network connected status.

5.1.2 Mailbox setting guide

1. Click the email icon, mailbox setup will pop up
2. Click the next step button.
3. Enter your email account address and password.
4. Click the next button, and select your mailbox server type: POP3 or IMAP.
5. Then click next button to check whether email server is available.
6. Input account name to display the name, then click completion.
7. If the mail is available, it will automatically enter your inbox.

5.1.3 Send E-mail messages

1. Click the E-mail, your inbox will be displayed.
2. Click the inbox to enter, automatically refresh email, click to read.
3. Press the menu button, and menu will pop up.
4. Click "compose" to write a new mail interface
5. Input your E-mail address of the recipient in the recipient column .
6. Input theme and information content.
7. If you want to add attachments, press the menu button, and then menu options will pop up.
8. Click "add attachments"
9. Select attachments which you want to send (such as video, images, etc.)
10. Click "send E-mail" to send out.

Note: If you have more than one account, and hope to send an email in one account, click that account title in advance before you click main menu key and write email.

5.1.4 Delete email accounts

You can delete settled POP3 or IMAP email account from your mobile phone

1. Click E-mail
2. Enter to your inbox
3. Press menu key
4. Click account
5. Hold account which you want to delete.
6. Slide down menu and click” Remove Account”
7. Click the" OK” to remove it.

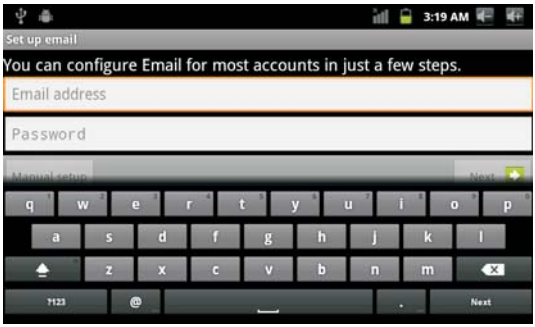

VI. Multimedia

6.1 Support the file format

This Cypad can support the following formats.

Music file format

- MP3
- AAC (AAC、AAC+、AAC-LC)
- OGG
- WAV

Video format

- AVI (H.264、DivX、XviD)
- MP4
- DAT
- VOB
- FLV
- 3GP

6.2 Music

The music is categorized into four types: artist, album, songs and playlist. Choose a classification to check list contents. If you choose the artist category, you will see A to Z sequence of a list of names of art. If you choose an artist, the list will present artist album songs and lists.

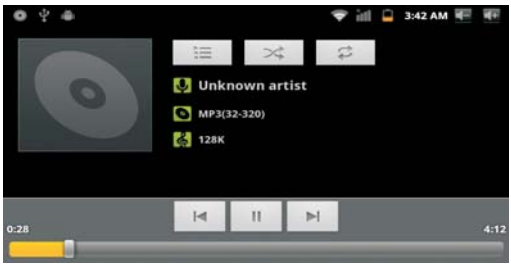

Visit and broadcast music

1. Click the music.
2. Click songs, or you can click artist, album or song list.
3. Choose one song to play.

Add song to the new playlists

1. Click the music.
2. Click the songs.
3. Hold the song which you want to add to playlist.
4. Click “Adds to playlist” to get into the next menu.
5. Click “New”.
6. Input the name for the song file
7. Click to save.

Delete the playlist

1. Hold the playlist you want to delete..
2. Click the “delete” on the menu.

6.3 Video

Visit and play video file

1. Click the Gallery.
2. Choose files you want to view.
3. Choose corresponding players to play will start to play the video.

6.4 HDMI

HDMI high-definition video interface

Use a standard HDMI cable to connect Cypad with high definition television. This interface can support the high quality 1080P resolution.

1 Cypad is on boot state.

2. Use a standard HDMI cable to connect Cypad with high definition television.
3. Click Settings.
4. Click sound and display.
5. Click Output Select .
6. Choose HDMI, then the video in Cypad will output to TV
7. Click HDMI Settings to set HDTV display resolution.

6.5 Gallery

Photo application enables you to automatically search for photos and video files on the SD card. The gallery will classify these photos and video documents. You can use gallery applications to view and edit photos, set any photos as desktop or watch video.

View pictures

1. Click the folder to view preferred picture album.
2. Click pictures you want to see, the system will automatically check in full screen mode.
3. Slide the picture to view the previous or next photo.
4. Press the screen, zoom-panel will appear in pictures below, you can zoom in or out the pictures.

Tip: Image browsing supports automatically rotating function. Cypad features G-Sensor function with which the picture automatically adjusts direction of rotation of Cypad.

Edit and set images

Press menu button to display option of menu in full screen mode, you can select the option to edit the setting up of picture based on your needs.

- Slideshow

Press the album and then the picture. Then click slideshow. All the pictures will be shown in slide mode.

- Sharing

1. Press the menu button to display menu option, and then click "share".
2. The picture will share with your friends via email attachment .

- Rotating

1. Press “More” to display menu option, and then click "rotating".
2. Click the left or right rotation.

- Cropping

1. Press “More” menu button to display menu option, and then click “Crop”
2. Click on drag related region to adjust cutting device.
3. Click on cutting device to drag out from centre to adjust cutting size.
4. Adjust the size you want, then click save.
5. If you want to abandon cutting, click "Discard" to return to browsing pictures.

VII. Internet

7.1 Browser

Enter into homepage

Click on the browser to enter homepage. The browser always have last memory for the last viewed website addresses.

Change your Home Page

1. Click the browser on your homepage.
2. Press menu button on the side panel，a menu will pop up for your selection
3. Click “More”.
4. Click “Settings”.
5. Slide the menu then click “Set homepage”.
6. Input website, and click "OK".

Visit website

1. Click on the browser.
2. Input the target URL
3. Press to go to surf the webpage.

Enlarge or shrink pages

When you slide your finger over the touch panel the “Zoom-In and Zoom-Out” soft button will appear. Click "enlarge" or "reduce" to browse webpage.

Find the words in webpage

1. When browsing the web, press menu button for menu options to pop out.
2. Click “More”.
3. Click “Find on page”.
4. Enter your search projects.
5. When you input characters, words can change from white to green.
6. Click arrow on search column to move previous or next keyword

Management bookmarks

- **Settings webpage bookmarks**
  1. Go to a web page in the browsing interface.
  2. Press menu button and click the bookmarks, then click add.
  3. Edit bookmarks and click OK.
- **Opening bookmarks**
  1. Press the menu button and click the bookmarks in the browser interface.

2. Click the bookmarks which you want to use to open the webpage.

- **Editing bookmarks**

1. Press the menu button and click the bookmarks in the browser interface.
2. Click and hold bookmarks to open the menu options.
3. Click the edit bookmarks to edit it, and then click OK.

IIX. Other Applications

8.1 Alarm clock

1. Click the clock program.
2. Enter into programming interface as below.
3. Press the menu button, alarm setting menu will pop up.
4. You can choose among different options: Time, ringtone, repeat, and label

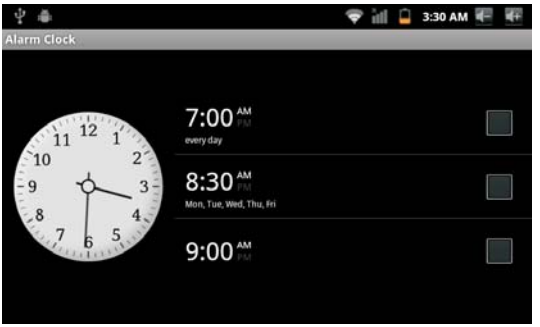

8.2 Calculator

1. Click the calculator.
2. Enter into the basic calculator panel.
3. Press the menu button, and then click the advanced panel.
4. Press digital numbers to calculate.

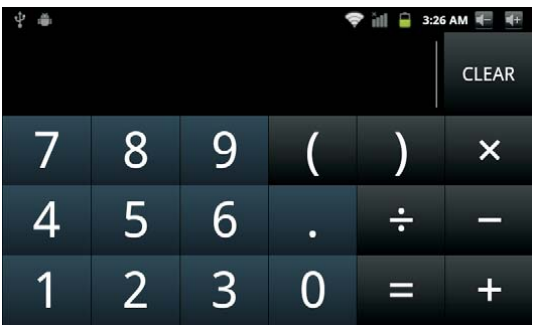

Tip: You can slide to switch basic panel and senior panel.

8.3 File Manager

Browse the file

Sliding desktop, and find the ES file explorer. You can use the file browser management to edit and delete files and folders.

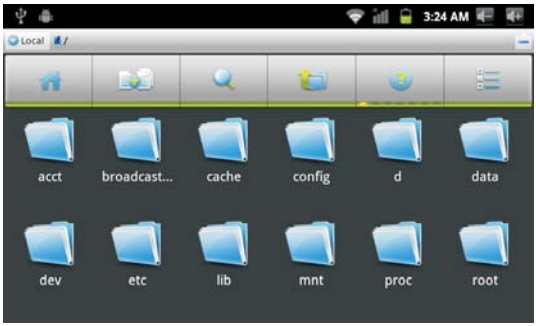

Cut and copy files

1. On the file browser, long press the file you want to cut and the menu will pop up.
2. The menu displays copying, cutting, deleting, rename, new, setting of content and attributes.
3. Click " cut" or "copy" to cut and copy folders.
4. Click the folder you want to paste into, press the menu button for the pop-up menu.
5. Press “Operations” and “Paste”.

Delete the file

1. Use fingers to hold the file you want to delete in the file browser.
2. Click "delete".
3. Click "OK" to delete files。

Establish folder

1. On the file browser, press the menu button for the menu to pop up.
2. Click "New".
3. Click “folder”.
4. Input new folder name in the text box.
5. Click "OK" to establish the folder.

Quick search

1. On the file browser, press the menu button for the menu to pop up.
2. Click "new".
3. Click "search".
4. A search panel displays for you to input your search keywords.
5. Click on "OK”, notice bar will display search progress bar.
6. After completion of search, dialogue box will pop up to confirm whether you need it to show results.
7. Click "OK" to display search results.

IX. Basic Setup

9.1 Sound and Display

Media volume Settings

1. On the homepage interface, press the menu button for the popup setting menu.
2. Click Settings.
3. Click Sound.
4. Click Volume to adjust Ringtone, Media or Alarm volume.
5. Press “OK” to confirm.

Screen button sound

You can set to maintain the sound for using soft keyboards or touch screen.

1. On the homepage interface, press the menu button for the popup setting menu.
2. Click Settings.
3. Click Sound.
4. Click “Audible Selection”

Display rotate

Adjust screen brightness

1. On the homepage interface, press the menu button for the popup setting menu.
2. Click Settings.
3. Click Display.
4. Scroll down the screen and click the brightness.
5. Brightness Settings panel will pop up, then drag to adjust the brightness level.
6. Click to OK

Adjust screen standby time

1. On the homepage interface, press the menu button.
2. Click Settings.
3. Click Display.
4. Scroll down the screen, then click screen timeout.
5. Choose standby time you want.

9.2 Location and Security

Setting unlock pattern

You can set up their unlock pattern (equivalent to password) to protect your Cypad privacy.

1. On the homepage interface, press the menu button.
2. Click Settings.
3. Click on location and security.
4. Click "Set up screen lock"".
5. Click Pattern to set up your preferred pattern for unlocking your cypad.
6. Click "Continue" twice. Then you will finish setting up the pattern.

Tip: To cancel go to set up screen lock then click none.

9.3 Micro SD Card and storage

Check Micro SD card and Cypad available storage space

1. On the homepage interface, press the menu button.
2. Click Settings.
3. Click storage.
4. Click SD card settings, then you will see the total space and available space .

Safely remove Micro SD card

Safe removal can effectively protect Micro SD card and increase service life of the Micro SD card .

1. On the homepage interface, press the menu button.
2. Click Settings.
3. Click storage.
4. Click SD card settings, click Unmount SD card.

9.4 Date and time

According to preset, the system will automatically use date, time zone and time provided by network.

1. On the homepage interface, press the menu button.
2. Click Settings.
3. Scroll down the screen, then click the date& time.
4. Set time accordingly by clicking the selection accordingly.

9.5 Set the language

1. On the homepage interface, press the menu button.
2. Click Settings.
3. Click on language & keyboard.
4. Click to select language area, then choose words of your need. Scroll down the list to see more of the language.

9.6 About device

Check Cypad status

1. On the homepage interface, press the menu button.
2. Click Settings.
3. Click “About device”.
4. Click the status. You can see the System updates, status, battery use, legal information, model number etc.

System updates

1. On the homepage interface, press the menu button.
2. Click Settings.
3. Click “About device”.
4. Click “System Updates”

5. Click “Install SystemUpdate” to display 2 options: 1) From SD Card and 2) From NAND Storage.

Check system version

1. On the homepage interface, press the menu button.
2. Click Settings.
3. Click “About device”.
4. Scroll down and check the Android system.

X. King Kong Market

• The King Kong Market is a showcase for some of the featured and top ranked applications and games available. For a comprehensive, up-to-date list of the tens of thousands of titles available, check out other application markets.

1. Click the King Kong Market icon from the desktop.
2. Choose from the list of applications.
3. Check whether the program need to be paid or not, then click”compatibility” to check compatbility.
4. Click “Install” if the programme is compatible with the device and if it’s free.
5. Register the needed information for must-be-paid programme.
6. Click “Install” to download programme after you paid for it.
7. Wait for the prompt “Do you want to install this application?”
8. Click “Install” and “Done/Open” when screen prompts “Application installed”.
9. Press [ESC] to go back and/or exit.

Note:

1. Applications can’t be downloaded unless it’s compatible with the device or system software.

2. When you get to the crash report dialog and press cancel, Apps menus will still work. You can use them to navigate. Even pressing ESC can restore the previous working screen. Worst case scenario would be to go to settings and force stop the application, relaunching will work,

3. Above operation must be under connected internet .

XI. System Upgrade

11.1 System upgrades preparation

Download the update process

You can download upgrading firmware from website to upgrade the system version of Cypad.

Prepare for system upgrading:

1. Download system upgrading firmware to your computer in the corresponding website.
2. Prepare tools for system upgrading: a Micro SD card, the file system of FAT or FAT23 format and with at least 8G memories.

11.2 Restore manufactured settings

When your Cypad appears to have gross problem or if you forget your password for not being able to unlock the Cypad etc, you can restore to original status by restoring factory defaults which will cause all data loss including downloaded applications and user setting to be deleted. So remember to backup your data.

1. In shutdown status, hold return key by one hand, and press boot key to enter the upgrade menu.
2. After entering system upgrade mode, you will see the triangle symbol with an exclamation point.
3. Click the return button.
4. The system is now into android system recovery, reboot factory settings, wipe data/factory reset etc. , providing 5 options to choose.
6. Choose wipe data/reset options to operate.
7. Choose" yes" to restore factory settings; choose "no" to exit this operation.

XII. Troubleshooting

1. Tablet PC first start is slow

- After system upgrades, installing preloaded application software takes about 2-3 minutes while first start. Then will be faster.

2. 3G net signal is weak

- Make sure you are operating the CyPad in places where 3G signals are strong and receivable

3. Can not connect with WIFI

- Be sure the wireless router is working
- Be sure distance between CyPad and wireless router keeps in a normal working range, and no wall or other obstacles in between
- Be sure user name and password are correct

4. **Feels a bit hot**
   - It is normal when many programs are in use, or the screen is in most brightness, or in charge.

5. **The system is abnormal**
   - Installing the 3rd party program may result in operation failure. Press RESET to reset the system.

6. **Unable Email setting or program logging**
   - Be sure the network is normal and is able to connect with Internet
   - Be sure Email setting is appropriate
   - Be sure system time is the same as the local

XIII. Specifications

- OS: Android 2.3
- Built-in 4GB Nand Flash
- Memory Expansion: Micro SD Card (Max 16GB)
- Wireless Network: Built-in WIFI Module, 802.11b/g
- Supports G-Sensor
- HDMI Output
- HD Video Decoder: Up to 1080P
- Instant Messaging
- Internet Browser, E-mail, Office, Calendar, Calculator
- Picture Viewing, Music / Video Playback, E-book Reading, Games
- Supports multi Languages